

# Brookstone®

## Motorized Grill Brush

WITH HEAVY-DUTY STEAM  
CLEANING POWER



Fold

### BATTERY PRECAUTIONS

- Dispose of the old batteries properly. Do not dispose of the old batteries in a fire.
- Do not leave the batteries where a child or pet could play with or swallow them. If the batteries are swallowed, contact a physician immediately.
- The batteries may explode if mistreated. Do not attempt to recharge or disassemble the batteries.
- Use only fresh batteries of the required size and type. Do not mix old and new batteries, different types of batteries, or rechargeable batteries of different capacities.

Fold

 
### WARNING

- The unit has sharp edges. Be cautious when using and keep away from children.
- Do not place the unit in a barbecue or oven, or on an open fire.
- Discontinue use if the unit's HANDLE becomes hot.
- Ensure the ROTATING BRUSHES are securely in place prior to use.
- The unit is not weather-resistant. Appropriate care should be taken when using and storing the unit.

Fold

### LOCATION OF PARTS AND CONTROLS

1. Power Button
2. Handle
3. Hanger
4. Battery Compartment Door
5. Water Button/Water Reservoir Access Tab
6. Scrapers (2)
7. Rotating Brushes (2)
8. Atomizer

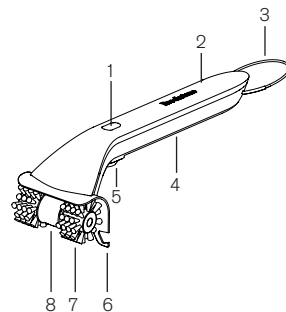


Fold

### INSTALLING THE BATTERIES

 1. Unscrew and remove the BATTERY COMPARTMENT DOOR.
2. Insert 4 C batteries (not included) according to polarity indicators inside the battery compartment.
3. Replace the BATTERY COMPARTMENT DOOR and replace the screw securely.

### FILLING THE WATER RESERVOIR

1. Pull open the WATER RESERVOIR ACCESS TAB.
2. Fill the WATER RESERVOIR with clean, cool tap water.
3. Press the WATER RESERVOIR ACCESS TAB securely back in place.

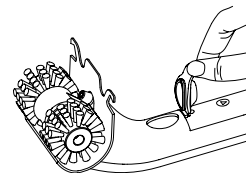

Fold

Brookstone®  
A WORLD OF INNOVATION

Since 1965, people have come to Brookstone to see what's new, discover smart solutions to everyday problems—and have some fun. At Brookstone, we believe there's always a better way to do things. And we created a world of innovation to prove it.

Merrimack, New Hampshire, USA 03054  
800-846-3000 • Brookstone.com

839053

Fold

USING THE GRILL BRUSH

**IMPORTANT:** Refer to your grill's user manual for cleaning instructions before using the grill brush.

1. After your grill has been used or heated up, turn your grill off and open its lid.
2. Press the **POWER BUTTON** on the Grill Brush to turn the **ROTATING BRUSHES** on.
3. Press the **WATER BUTTON** and spray water on the hot grill grate. This creates steam to loosen tough grease and grime.

 
**Note:** You may need to push the **WATER BUTTON** several times to prime the sprayer.

4. Clean the grill grate by moving the **ROTATING BRUSHES** back and forth.
5. Use the **SCRAPERS** to remove tough buildup.
6. Press the **POWER BUTTON** to turn the **ROTATING BRUSHES** off.
7. Use the **HANGER** to store the unit when not in use.

CARE AND MAINTENANCE

CLEANING THE ROTATING BRUSHES

1. Insert a small screwdriver between the brush heads and the housing.



2. Lift the screwdriver up to remove each **ROTATING BRUSH**.
3. Hold the **ROTATING BRUSHES** under warm running water.
4. Allow the **ROTATING BRUSHES** to air dry completely.
5. When the **ROTATING BRUSHES** are dry, slide and snap them back in place.

**IMPORTANT:** Do not put the **ROTATING BRUSHES** in the dishwasher.

Fold

CARE AND MAINTENANCE

CLEANING THE HANDLE

Wipe the **HANDLE** with a soft, slightly damp cloth. Do not submerge the **HANDLE**.

CLEANING THE SCRAPERS

Wash the **SCRAPERS** in warm soapy water. Dry thoroughly before the next use. Do not submerge the **HANDLE**.

Fold

NOTES

Fold

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

**Obtaining Service:** To obtain warranty service, call Brookstone Limited Warranty Service at **1-800-292-9819**. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

**Limits and Exclusions:** Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own

Fold

warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

**BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.**

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.